



**Please UNINSTALL the BD1 and use the following steps exactly before re-installation:**

- Trim the tailpiece (metal bar that fits thru the latch body) so that it matches the thickness of your door.  
EX: If the door is 1 3/4" thick then the tailpiece should be cut to 1 3/4" in length.
- Make sure that the deadbolt is extended in the locked position (use a flathead screwdriver)
- Switch the "L" or "R" switch on the **inside unit** to the appropriate setting (Use the following illustration for reference)

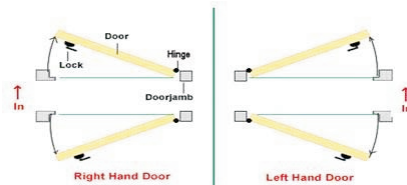

- Install the outdoor unit thru the latch, making sure that the **tailpiece is VERTICAL when it is inserted thru the cross of the latch body**
- Connect the interior and exterior wires, making sure that the male prongs are securely connected into the female receptacles.
- Install the inside unit to the door, making sure that the Turn Knob is facing down (please see illustration below for reference)

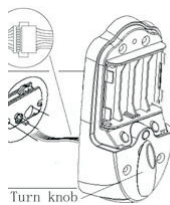

- Screw the inside units into exterior units' fixing post holes.
- Test the operation of the unit with the screws loosely tightened and tighten screws until lock is securely on the door, making sure that the tailpiece does not get jammed. If the knob is difficult to turn electronically or manually, then the tailpiece may need to be trimmed more or batteries are running low.

**Additional recommendations:**

- Take the batteries out
- Press and hold the Open Close button on the inside unit for 10 seconds and re-insert the batteries (to release any static)
- Also, the **sliding cover on the outside unit must always be closed when using the Open Close button on the inside unit.**
- To engage/disengage the deadbolt (WITHOUT fingerprints enrolled) from the outside unit, the sliding cover must be opened and closed, not just simply left open.